


## To installers

When the installation is over, be sure to enter the name of your company and the date of installation in the warranty card and hand it over to the customer together with this Instruction Manual.

## To customers

Read this Instruction Manual carefully in order to use the product properly. Since this Instruction Manual includes the warranty card, store it carefully.

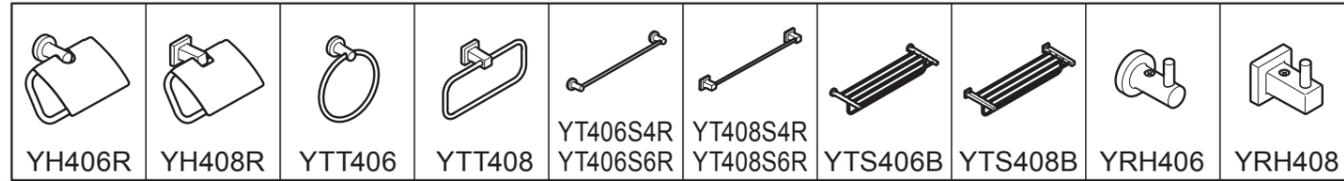

## Safety Precautions (Observe the following matters for safety sake.)

### Read these "Safety Precautions" carefully before use and use the product properly

- After you read this manual, store it in a place where users can refer to it at any time.
- In this Instruction Manual, various indications are used to ensure the product is used properly and to prevent risk to you and other people, and damage to property. The indications and their meanings are as follows.

- The kind of observance is categorized by the following pictograms.

Indication	Meaning
<b>Warning</b>	Handling the product contrary to this indication may result in serious injury or even death.
<b>Cautions</b>	Handling the product contrary to this indication may result in injury or damage to property.

	<p>means "not to do something" or that "something is prohibited".</p> <p>The left figure indicates that "disassembly is prohibited".</p>
	<p>means that "something must be done" or "is required".</p> <p>The left figure indicates that "must do something".</p>

## Warnings and Cautions in Use

<b>Warning</b>		<b>Do not hang or lean over on the product.</b> Otherwise, installation becomes unstable and you may fall and get injured.
<b>Cautions</b>		<b>Do not disassemble parts other than those specifically indicated in this instruction manual.</b> Otherwise, the product may fall and you may get injured.
		<b>Do not put or hang anything other than bathrobes and towels on the robe hook, towel shelf, towel hanger and towel ring.</b> Otherwise, installation becomes unstable and the product may fall off and injure you.
		<b>As for the paper dispenser, do not set anything heavier than a paper roll on the paper roll core support.</b> Otherwise, installation becomes unstable and the product may fall off and injure you.
		<b>Must do check the product periodically (once a month) for any abnormalities such as instability and looseness.</b> Otherwise, the product or a part of it may fall off and injure you.
		<b>If any abnormality such as instability is found during use, stop using the product immediately and have the installer or dealer check it.</b> Otherwise, the product may fall off and injure you.

### Note on Use of Paper Dispenser

Use paper rolls having an outer diameter of less than 120 mm, a width of less than 114 mm, and a core inner diameter of 32 ~ 38 mm.

## Cleaning

### Normal cleaning

- Squeeze a piece of cloth soaked with cold or warm water, and then wipe the product with it.

### For stubborn dirt

- Wipe the product with a piece of cloth soaked with appropriately diluted neutral detergent, then blot up any moisture with a dry piece of cloth.

### Cautions in cleaning

- Do not use the following products as they may damage the product surface.
- Acidic detergent, alkaline detergent and chlorine bleach.
  - Thinner, benzine, etc.
  - Detergent that contains coarse particles such as cleanser or polishing powder.
  - Nylon scrubber, brush, etc.

## Periodic Checking

In order to prevent serious accidents due to aged deterioration and to use the product safely and comfortably for a long period of time, we ask customers to check the product once a month. If any trouble is found, contact the installer or dealer.

Location	Check Item	Trouble (Y/N)		Expected Concrete Phenomenon Due to Aged Deterioration (Safety Hazard Information, etc)
1	Wall anchoring	Y	N	The product is detached from the wall and may cause injury if it falls off.
2	Screwed part	Y	N	The product or a part of it is detached and may cause injury if it falls off.

### Locations where to check screwed parts

